



- To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.

- Do not immerse the appliance in water or any other liquid to avoid harm to human or the product.

- Keep body parts (e.g. hands) and utensils away from corkscrew to avoid damage.


- Keep this product away from children.

- Do not dismantle the product by yourself.


- Do not press the product onto the bottle with sudden force or attempt to speed up the mechanism. This product works best when operating at its intended speed.

- No extended use is allowed.

- Keep away from flammable, explosive gas.

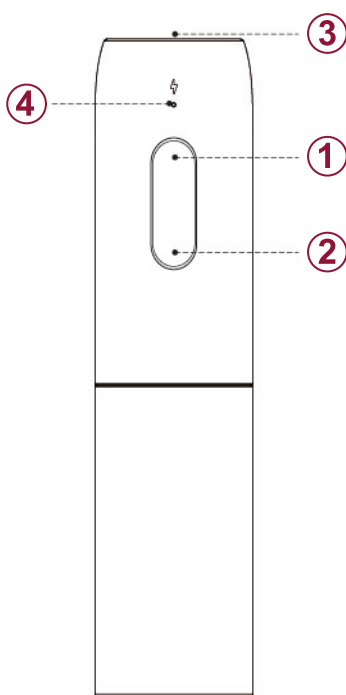

1. Release button
2. Extract button
3. Charging socket
4. Indicator light
5. Type-C charging cable

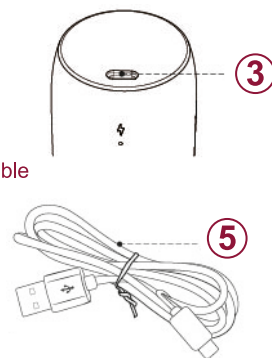


- Insert the charging line interface into the Type-C charging socket the top of the opener.

- Insert the adaptor into an indoor electric socket, the indicator lights up, indicating it is charging normally.

- The indicator light stops lighting when the battery is fully charged.


- It takes 2.5hour to fully charge the battery.

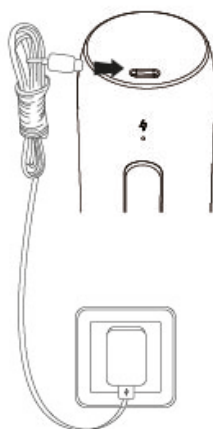


- This is a lithium-battery rechargeable product. When not in use, it is recommended to charge every three months to ensure service life of the battery.

- Adapter is not included with this product. It should be charged with a power adapter with fixed output voltage of 4.5V - 5.5V and it is not suitable for fast charging power adapter.

Hold the bottle firmly with one hand and hold the wine opener with the other. Place the bottom of opener body on top of the wine bottle to ensure the opener body remains in line with the wine bottle as much as possible.

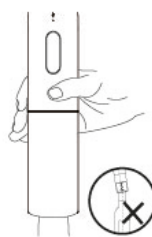

Press the extract button and hold, slightly press the opener body downward at the same time. The spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle in 6-8 seconds. When the cork is entirely pulled out, the wine opener stops automatically. Release the button and take the opener from the bottle.

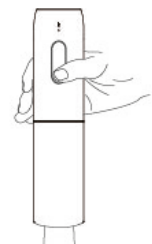

Press the upper release button and hold for 5-7second, the cork automatically comes out from the opener, release the buttom, and complete the opening procces.



- This product is suitable for corks with a diameter of 20mm to 24mm and a height of 44mm.

- This product is suitable for wine bottles with an bottleneck outer diameter of not more than 35mm and bottleneck inner diameter of 17.5mm to 23mm.

- It is recommend to cut off the foil seal from the wine bottleneck with a foil cutter before using the opener.

- Hold the product body and the wine bottle firmly during use.

- Please store this product out of reach from children.

- Align the product body with the wine bottle as much as possible, or otherwise the cork cannot be pulled out easily.

If the opener cannot work or stops during uncorking:


- Please charge it.
- (Note: It is not recommended to use the product while charging)

- Please press the release button until wine opener is entirely separated from bottle, and re-open after ensuring the opener body is aligned with the wine bottle.


If the above operations are all correct and the opener still works abnormally, please contact the vendor for maintenance service.




- Не потапяйте продукта във вода или друга течност, за да избегнете щети на хора или на продукта.
- Поддържайте частите на продукта сухи и далеч от контакт с течности, за да предотвратите повреда.
- Съхранявайте продукта на места, недостъпни за деца.
- Не разглобявайте продукта сами.
- Не натискайте продукта върху бутилките с прекомерна сила и не го използвайте с твърде висока скорост на въртене.
- Не използвайте продукта непрекъснато за дълго време.
- Не поставяйте продукта близо до топлинни, запалими или експлозивни източници.

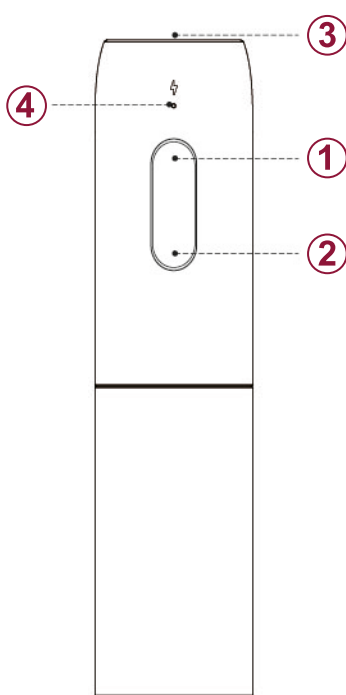

1. Бутон за освобождаване
2. Бутон за изваждане
3. Заряден порт
4. Индикаторна светлина
5. Заряден кабел тип C



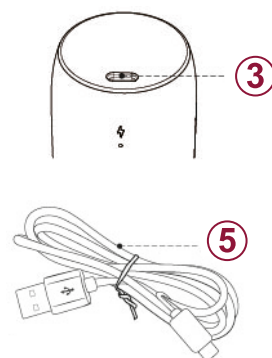


1. Включете конектора на кабела за зареждане в тирбушона. Буксата за включване е в горната част на тирбушона.
2. Включете адаптера в електрически контакт (зарядното устройство не е включено). Светлинният индикатор ще светне, когато батерията е напълно заредена.
3. Пълното зареждане на батерията отнема 2,5 часа.

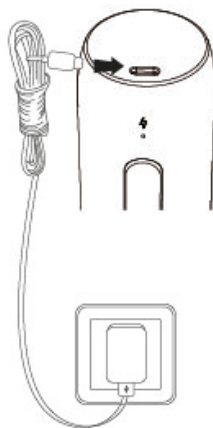

- Това е зареждащ се продукт с литиева батерия. Зареждайте батерията поне веднъж на всеки три месеца, за да осигурите дълъг експлоатационен живот.
- Адаптерът не е включен в този продукт. Ако е необходимо, използвайте 5V/1A или 5V/2A адаптер за бързо зареждане.

1. Придържайте бутилката здраво с едната ръка, а с другата дръжте тирбушона. Поставете горната част на тирбушона върху бутилката вино възможно най-права.
2. Натиснете бутон за изваждане, докато тапата излезе от бутилката.
3. Натиснете горния бутон, за да освободите корковата тапата от иглата.

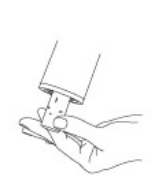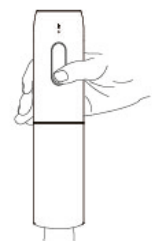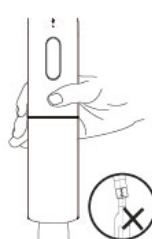

- Адаптерът не е включен в този продукт. Ако е необходимо, използвайте 5V/1A или 5V/2A адаптер за бързо зареждане.
- Този продукт е подходящ за бутилки с диаметър от 20 мм до 24 мм и височина на гърлото 40 мм.
- Този продукт е подходящ за отваряне на бутилки за вино с външен диаметър на гърлото на бутилката между 17,5 мм и 23 мм.

- Ако тирбушонът не може да работи или спре по време на работа:
 - Заредете тирбушона.
 - Уверете се, че тирбушонът е поставен правилно върху бутилката.
- Ако бутонът за освобождаване не работи правилно за отстраняване на тапата, уверете се, че иглата е подравнена с тапата, преди да я освободите.
- Ако тези операции не разрешат проблема, моля, свържете се с отдела за обслужване на клиенти за съдействие.